 


## V. PROGRAMMING

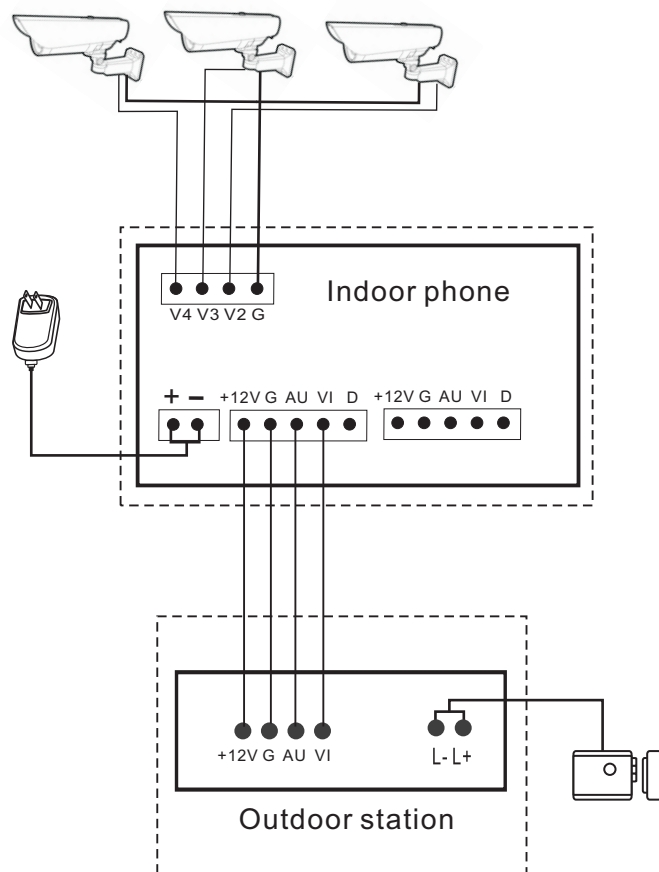

# OPIZ

## User Manual

### Video Door Phone



OP—D6A8M3

 
[www.opizcn.com](http://www.opizcn.com)  
OPIZ ELECTRONICS CO.,LTD.

**OPIZ** tip

• Thank you for your kindly purchasing our product.  
Please read this user manual carefully before using the product and following instructions exactly on how to install and use the product.


## I. VIEW

### 1. Front view

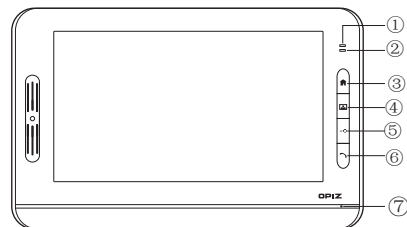


- ① Power indicator
- ② Intercom indicator
- ③ Record
- ④ Monitor
- ⑤ Unlock
- ⑥ Intercom
- ⑦ MIC

### 2. Side view

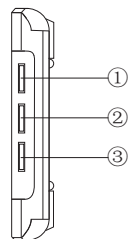 

 
- ① Multi-functions button
- ② Adjust volume of ringtone
- ③ Adjust volume of intercom

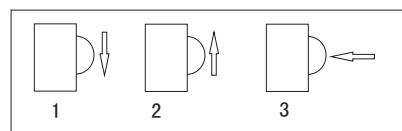

Instruction of multi-functions button

1. move down/reduce
2. move up/increase; check message button in standby states
3. menu button in standby states; confirm button

### 3. Rear view

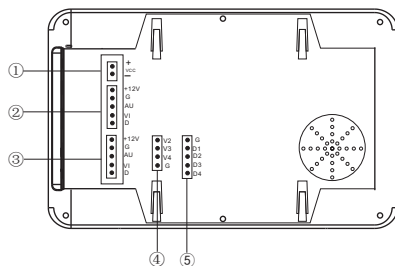 

- ① Connect with power adapter
- ② Connect with indoor phone
- ③ Connect with outdoor station
- ④ Connect with camera
- ⑤ Connect with alarm zone (No use for villa system)

- + Power "+"
- Power "-"

12V Connect with power supply wire  
of outdoor station

G Common wire

AU Intercom&unlock line

Vi Video line

D Connect with other indoor phone

## II. FUNCTIONS

1. Intercom
2. Unlock
3. Monitor
4. Auto take photo
5. Leave messages
6. Auto shut down
7. Time and date display
8. 12 ringtones for option
9. Intercom between monitors
10. Adjust image
11. Adjust ring tones volume
12. Adjust intercom volume

## III. OPERATION

1. Intercom: press "Intercom" button to communicate with visitor when indoor phone rings. In standby states, press "monitor" and "Intercom" button can also communicate with outdoor bell.
2. Intercom between indoor phones: press "Intercom" button to communicate with each indoor monitors.
3. Unlock: press "unlock" button to open the door lock in intercom states or monitor states.
4. Monitor: In standby, press "Monitor" button to view the outdoor station, press again to turn to another camera channel, and then stop.
5. Auto take photo: indoor phone will auto take photo in calling states or monitor states.
6. Leave messages: in calling states, if no answer after 20 seconds, visitor will hear "Thank you for your visiting, unfortunately we are not available now, please leave your message." visitor can leave audio messages in 35 seconds.
7. Check messages: move up the multi-functions button to check message, then move up or down to check message, and press "menu" button (confirm button) again to play, ⏮ former message, ⏭ next message, ⏸ play or stop, 🗑 delete the message, ⏪ back into main menu.
8. Check photos: choose photo icon 📷 and press menu button, then move up or down to choose the photo and press "menu" button (confirm button) again to check. 🗑 delete all photos.
9. Choose ringtones: choose ringtone icon 🎵 and press menu button, then move up or down to choose ringtones.
10. Adjust volume of ringtones: please adjust button ② at side.
11. Adjust volume of intercom: please adjust button ③ at side.
12. Time setting: choose time icon 🕒 and press menu button, then move up or down to set up time.
13. Date setting: choose date icon 📅 and press menu button, then move up or down to set up date.
14. Adjust image: choose related icon and press menu button to adjust 🌞 brightness, 📺 contrast, 🎨 color.

## IV. SPECIFICATIONS

Temperature: -25℃~55℃  
Relative humidity: 45%-95%  
Atmospheric pressure: 86Kpa~108Kpa  
Fire endurance rating: IP33  
Resolution: 800\*480

Working voltage: DC13.5V  
Working current: 600mA  
Dimension: 205\*125\*25mm  
Installation: wall mounted  
N.W.: 330g